


# dyson solarcycle morph

الامتثال التنظيمي  
ومعلومات السلامة



CD06

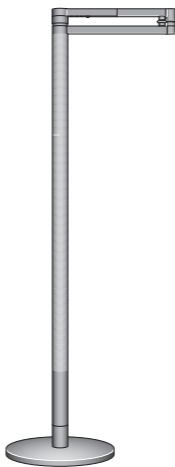

CF06

# إرشادات السلامة المهمة

قبل استخدام هذا المصباح، اقرأ جميع الإرشادات والعلامات التحذيرية الواردة في دليل المستخدم وعلى المصباح.

عند استخدام جهاز كهربائي، ينبغي دومًا اتباع الاحتياطات الأساسية، بما في ذلك ما يلي:

## ⚠ تحذير

هذا المصباح يحتوي على مغناطيس

1. قد تتأثر ناظمت القلب الاصطناعية وأجهزة مزيل الرجفان بالمجالات المغناطيسية القوية. إذا كنت أنت أو أي شخص في منزلك لديه منظم القلب الصناعي أو مزيل الرجفان، فتجنب وضعه بالقرب من الجهاز.
2. ربما تتأثر بطاقات الإئتمان ووسائط التخزين الإلكترونية المغناطيس ويجب إبقاؤها بعيدًا عن المصباح.

تنطبق هذه التحذيرات على  
المصباح، كما تنطبق حسب  
مقتضى الحال على أجهزة الشحن  
أو مهايات التيار.

لحد من خطر نشوب حريق أو  
حدوث صدمة كهربائية أو إصابة  
بدنية:

3. لا يمكن استخدام هذا المصباح  
من قبل الأشخاص ذوي القدرات  
البدنية أو الحسية أو العقلية  
المحدودة، أو الذين يفتقرون  
إلى الخبرة والمعرفة، إلا إذا تم  
تقديم الإشراف أو التوجيه إليهم  
من شخص مسؤول بشأن  
استخدام المصباح بطريقة آمنة  
وفهم المخاطر التي قد تنجم عن  
هذا الاستخدام. ينبغي ألا يقوم  
الأطفال بتنظيف المصباح أو  
صيانته.
4. لا تسمح باستخدامه كلعبة.  
من الضروري الانتباه جيدًا عند  
استخدام المصباح بالقرب من  
الأطفال.
5. تأكد من تركيب أجزاء المصباح  
بالكامل وفقًا للتعليمات قبل  
استخدامه.
6. مناسب للاستخدام داخل المباني  
فقط (عند درجة حرارة 0 مئوية  
(32 فهرنهايت) - 40 مئوية  
(104 فهرنهايت)).

7. احرص على استخدام المصباح وفقاً لما هو موضح في دليل Dyson فقط. لا تقم بإجراء أي عملية صيانة بخلاف التي ينصح بإجرائها خط المساعدة التابع لشركة Dyson.
8. إذا لم يعمل المصباح كما يجب، أو تلقى ضربة قوية أو سقط أو تلف أو تُرك في مكان مكشوف أو سقط في الماء، فلا تستخدمه واتصل بخط المساعدة التابع لشركة Dyson.
9. إذا كان المصباح بحاجة إلى الصيانة أو الإصلاح، فيرجى الاتصال بخط المساعدة التابع لشركة Dyson بحيث يمكننا مناقشة الخيارات المتاحة. لا تقم بفك المصباح حيث إن إعادة تركيبه بطريقة غير صحيحة قد تؤدي إلى حدوث صدمة كهربائية أو نشوب حريق.
10. ينبغي ألا يتم استخدام هذا المصباح إلا مع وحدة الإمداد بالطاقة المتوفرة معه.
11. لا تتعامل مع أي جزء من المصباح أو الكابل أو القابس بيدين مبتلتين.
12. لا تستخدم الجهاز في حالة وجود تلف في الكابل أو المقبس. وإذا كان هناك تلف في كابل الكهرباء، يجب استبداله بمعرفة شركة دايسون أو وكيل الصيانة

- التابع لها أو أي شخص يتمتع  
بدرجة مشابهة من التأهيل،  
لتجنب التعرض لأي خطر.
13. تجنب شدّ الكبل أو الضغط عليه  
بقوة. واحرص على إبعاد الكبل  
عن الأسطح الساخنة.
14. لا تضع الكبل أسفل السجاد.  
تجنب تغطية الكبل بالسجاد أو  
المشايات أو ما شابه ذلك. ضع  
الكبل بعيداً عن مناطق السير  
في مكان لا يتعثر المارة به.
15. تفصل السلك بشدّ السلك  
نفسه. ولفصل السلك، أمسك  
بالقابس وليس بالسلك. لا  
تستخدمه مع مشترك كهربائي.
16. أوقف تشغيل مفاتيح التحكم  
قبل فصل الجهاز. افصل الجهاز  
عن المقبس في حالة عدم  
استخدامه لفترات طويلة. لتجنب  
خطر التعثر، قم بلف الكبل.
17. تجنب استخدامه بالقرب من  
الأفران أو المواقد أو المصادر  
الأخرى مرتفعة الحرارة.
18. مصدر الضوء غير قابل  
للاستبدال؛ عندما يصل المصباح  
إلى نهاية عمره يُستبدل بالكامل.  
الاستبدال نتيجة نهاية العمر غير  
مشمول بالضمان.

19. احرص على عدم وضع أي شيء على مصدر الإضاءة/العدسات مباشرةً، فقد يتسبب ذلك في تلف ناتج عن ارتفاع درجة الحرارة وإلغاء الضمان.

## اقرئي هذه الإرشادات واحتفظي بها

### معلومات إضافية

#### لاتصال بتطبيق MYDYSION™

- تبذل شركة Dyson قصارى جهدها لضمان توافق تقنيتنا مع أنظمة التشغيل الحالية ولكننا لا نضمن ذلك. إذا كانت لديك أي أسئلة أخرى، أو ترغب في مراجعة أحدث معلومات التوافق، فيرجى الاتصال بخط المساعدة التابع لشركة Dyson.
- يجب أن يكون جهازك المحمول مزودًا بتقنية Bluetooth® اللاسلكية 4.0 (تقنية Bluetooth منخفضة الطاقة) من أجل إعداد اتصال مع المصباح. راجع مواصفات جهازك للتحقق من التوافق.
- إن علامة كلمة Bluetooth® وشعاراتها هي علامات تجارية مسجلة مملوكة لشركة Bluetooth SIG, Inc. ويخضع أي استخدام لهذه العلامات من قبل Dyson للترخيص.

#### التخلص

- منتجات Dyson مصنوعة من مواد عالية الجودة قابلة لإعادة التدوير. لذلك عليك إعادة تدويرها كلما كان ذلك ممكنًا.
- التخلص من المنتج وفقًا للقوانين أو اللوائح المحلية.

#### ضمان محدود لمدة 5 أعوام

شروط وأحكام ضمان DYSON المحدود لمدة 5 أعوام

#### البود المشمولة بالضمان

- يتم إصلاح مصباح Dyson أو استبداله (وفقًا لتقدير شركة Dyson) إذا تبين أنه معيب نتيجة وجود خلل في المواد أو الصنع أو الوظائف خلال 5 أعوام من تاريخ الشراء أو التسليم (إذا لم يعد أي جزء متوفرًا أو لم يعد يتم تصنيعه، فتلتزم شركة Dyson باستبداله بجزء يعمل).
- لن يكون هذا الضمان ساريًا إلا إذا تم استخدام المصباح في البلد الذي بيع فيه.

#### البود غير المشمولة بالضمان

- لا تضمن شركة Dyson إصلاح المصباح أو استبداله إذا كان العطل نتيجة لما يلي:
- التلف الناتج عن عدم تنفيذ أي صيانة موصى بها للمصباح.
- التلف العرضي والتعطال الناتجة عن الإهمال في الاستخدام أو العناية بالمصباح أو إساءة استخدام المصباح أو إهماله أو تشغيله أو التعامل معه بشكل لا يتوافق مع دليل المستخدم من Dyson.
- استخدام المصباح لأغراض أخرى بخلاف الاستخدام المخصص له.
- استخدام أجزاء لم يتم تجميعها أو تركيبها وفقًا لتعليمات Dyson.
- استخدام أجزاء وملحقات ليست من المكونات الأصلية التابعة لشركة Dyson.
- التركيب الخاطئ لمكونات الجهاز (إلا إذا تم تركيبه بواسطة Dyson).

- تنفيذ الإصلاحات والتبديلات بواسطة أطراف أخرى غير Dyson أو أي من وكلائها المعتمدين.
  - البلى والتقدم المعتاد (مثل قاطع التيار وما إلى ذلك).
- إذا كانت لديك أي شكوك حول ما يغطيه الضمان، يُرجى الاتصال بخط المساعدة التابع لشركة Dyson.

### ملخص تغطية الضمان

- يصبح الضمان ساريًا من تاريخ الشراء (أو تاريخ التسليم إذا كان هذا التاريخ لاحقًا).
- يجب عليك تقديم ما يثبت (سواء المصباح الأصلي أو أي من ملحقاته التي اشتريتها بعد ذلك) عملية التسليم/الشراء قبل تنفيذ أي أعمال على مصباح Dyson. ومن دون هذا الإثبات، ستتحمل دفع نفقات أي أعمال يتم إجراؤها. ويجب عليك الاحتفاظ بقسيمة الشراء أو إشعار التسليم.
- سيتم تنفيذ كافة الأعمال بمعرفة شركة Dyson أو أي من وكلائها المعتمدين.
- أي أجزاء يتم استبدالها بمعرفة Dyson تصبح ملك لشركة Dyson.
- إصلاح مصباح Dyson أو استبداله وهو لا يزال في فترة الضمان لن يمد فترة الضمان.
- يوفر الضمان مزايا مضافة إلى المنتج ولا يؤثر في أي حقوق قانونية قد تتمتع بها كمستهلك.

### معلومات مهمة عن حماية البيانات

- ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية عند تسجيل منتج Dyson الخاص بك أو تطبيق MyDyson™؛
- عند التسجيل عبر تطبيق MyDyson™:
- ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية لتسجيل تطبيق MyDyson™، هذا يمحّنا من ربط منتجك بأمان بمثيل التطبيق لديك.
- عند تسجيل مصباح Dyson الخاصة بك
- ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية لتسجيل منتجك وتمكيننا من دعم الضمان الخاص بك
- عند التسجيل، سيكون لديك الفرصة لاختيار تلقي رسائل منا أم لا. إذا وافقت على تلقي رسائل من Dyson، فسنرسل لك تفاصيل العروض الخاصة والأخبار المتعلقة بأحدث الابتكارات لدينا.
- نحن لا نبيع مطلقًا معلوماتك إلى جهات أخرى كما أننا نستخدم المعلومات فقط التي تشاركها معنا على النحو الذي تحدده سياسات الخصوصية لدينا المتوفرة على موقع الويب الخاص بنا [privacy.dyson.com](http://privacy.dyson.com)

### نقطة شحن USB-C



يُعد كل من Apple وشعار Apple علامتين تجاريتين لشركة Apple Inc. مسجّلتين في الولايات المتحدة والبلدان الأخرى. كما يمثل App Store علامة خدمة لشركة Apple Inc. مسجّلة في الولايات المتحدة والبلدان الأخرى. أما Google Play وشعار Google Play، فهما علامتان تجاريتان لشركة Google Inc.



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries.  
Google Play and the Google Play logo are trademarks of Google Inc.

## What is not covered

Dyson does not guarantee the repair or replacement of a light where a defect is the result of:

- Damage caused by not carrying out any recommended maintenance of the light.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, carelessness or operation or handling of the light which is not in accordance with the Dyson User manual.
- Use of the light for anything other than the use it is designed for.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Normal wear and tear (e.g. fuse etc.).

If you are in any doubt as to what is covered by your guarantee, please contact the Dyson Helpline.

## Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson light. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson light under guarantee will not extend the period of guarantee.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.

## Important data protection information

You will need to provide us with basic contact information when you register your Dyson light or the MyDyson™.

When registering via the MyDyson™:

- You will need to provide us with basic contact information to register the MyDyson™; this enables us to securely link your light to your instance of the app.

When registering your Dyson light:

- You will need to provide us with basic contact information to register your light and enable us to support your guarantee.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website [privacy.dyson.com](http://privacy.dyson.com).

## USB-C charging point



Plug in your mobile devices to charge up to 1.5A at 5V.



be replaced. End of life replacement is not covered under the guarantee.

19. Do not place anything directly on the light source/lens as this can cause overheating damage and void the guarantee.

# READ AND SAVE THESE INSTRUCTIONS

## Additional information

### MyDyson™ app connectivity

- Dyson endeavours to ensure that our technology is compatible with current operating systems, but this is not guaranteed. If you have any questions or would like to check the latest compatibility, please contact the Dyson Helpline.
- Your mobile device must have Bluetooth® wireless technology 4.0 support (Bluetooth Low Energy) in order to set up a connection with the light. Check your device specification for compatibility.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Dyson is under license.

### Disposal

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose in accordance with local ordinances or regulations.

### Limited 5-year guarantee

Terms and conditions of the Dyson 5-year limited guarantee.

### What is covered

- The repair or replacement of your Dyson light (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within five years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- This guarantee will only be valid if the light is used in the country in which it was sold.

- persons in order to avoid a hazard.
13. Do not stretch the cable or place the cable under strain. Keep cable away from heated surfaces.
  14. Do not run cable under carpeting. Do not cover cable with throw rugs, runners or similar coverings. Arrange cable away from traffic area and where it will not be tripped over.
  15. Do not unplug by pulling on the cable. To unplug, grasp the plug, not the cable. Do not use with an extension lead.
  16. Turn off all controls before unplugging. Unplug from the socket when not in use for extended periods. To avoid a tripping hazard, safely coil the cable.
  17. Do not use near furnaces, fireplaces, stoves or other high temperature heat sources.
  18. The light source is not replaceable; when the light source reaches its end of life, the whole light shall

7. Use only as described in the Dyson User manual. Do not carry out any maintenance other than that advised by the Dyson Helpline.
8. If the light is not working as it should, has received a sharp blow, has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Dyson Helpline.
9. If a service or repair is needed, contact the Dyson Helpline so we can discuss the available options. Do not disassemble the light as incorrect reassembly may result in an electric shock or fire.
10. This light is only to be used with the power supply unit provided with it.
11. Do not handle any part of the light, cable or plug with wet hands.
12. Do not use with a damaged cable or plug. If the supply cable is damaged it must be replaced by Dyson, its service agent or similarly qualified

These warnings apply to the light, and also where applicable to chargers or mains adaptors.

To reduce the risk of fire, electric shock, or injury:

3. This light can be used by persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the light in a safe way and understand the hazards involved. Cleaning and maintenance shall not be performed by children.
4. Do not allow to be used as a toy. Close attention is necessary when the light is used near children.
5. Ensure light is fully assembled in line with the instructions before use.
6. Suitable for indoor use only  
0°C (32°F) – 40°C (104°F).

# IMPORTANT SAFETY INSTRUCTIONS

BEFORE USING THIS LIGHT  
READ ALL INSTRUCTIONS AND  
CAUTIONARY MARKINGS IN  
THE USER MANUAL AND ON  
THE LIGHT.

When using an electrical  
appliance, basic precautions  
should always be followed,  
including the following:


## **WARNING**

### **THIS LIGHT CONTAINS MAGNETS**


1. Pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has a pacemaker or defibrillator avoid placing near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the light.

# dyson solarcycle morph

## Regulatory compliance and safety information

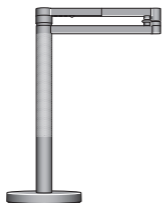

CD06

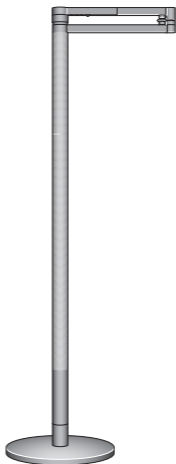

CF06

JN.125603 PN.335409-09-05 13.07.23